



## Find the chain pitch

Please measure the distance between 3 rivets


12.7 mm = 1/4" pitch\*

15,2 mm = 0,3" pitch

16.5 mm = .325" pitch


18.6 mm = 3/8" pitch\*

20.5 mm = .404" pitch

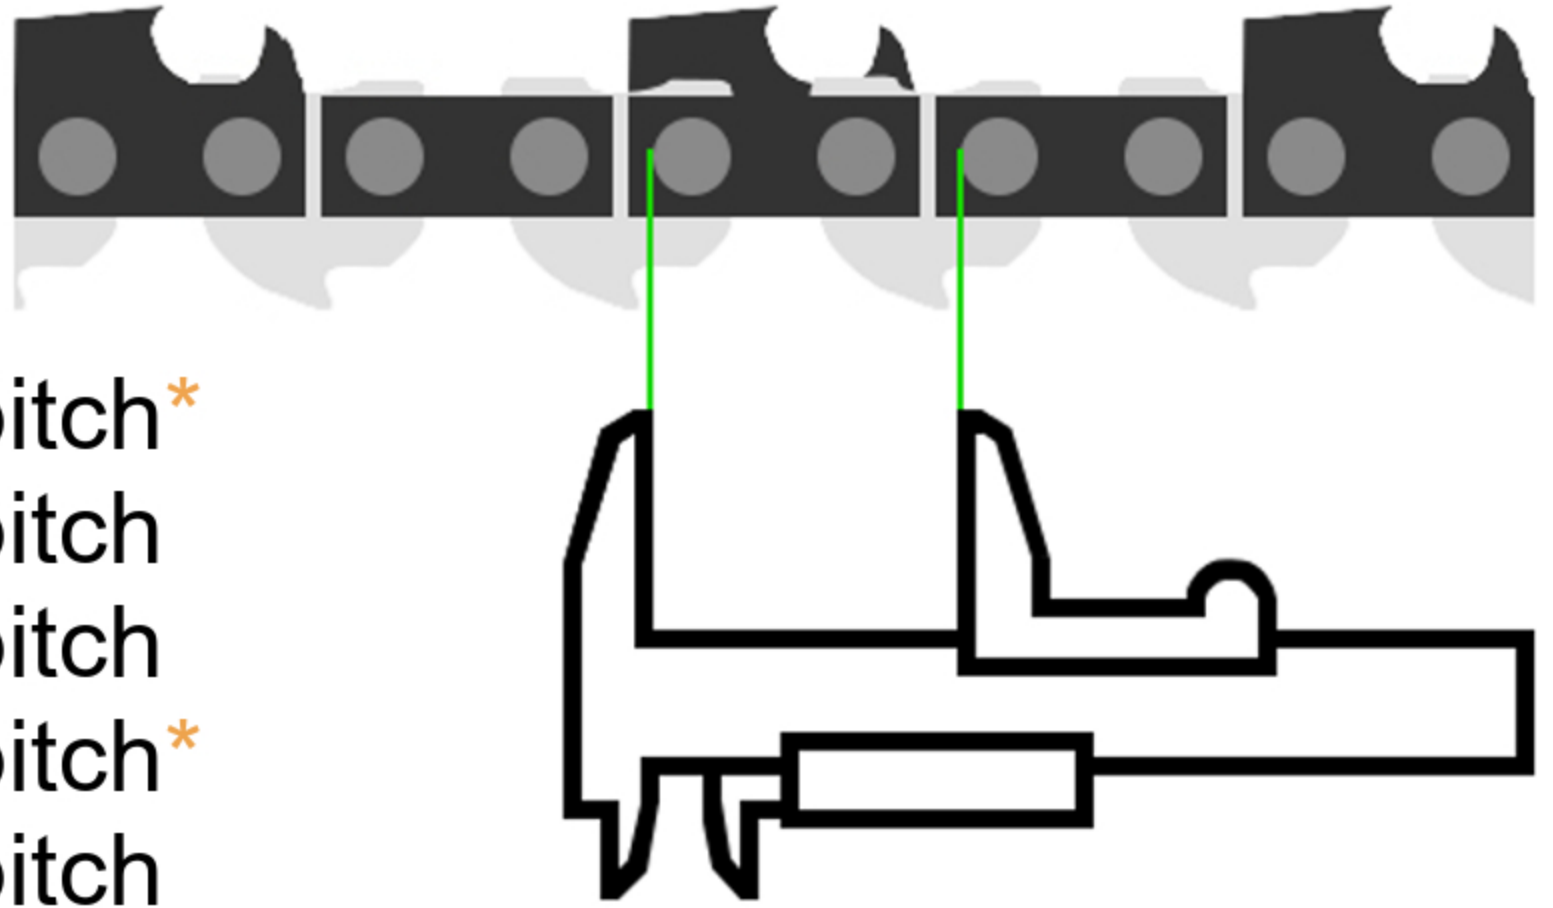

## Find the number of the drive links

Please count the number of the drive links (DL)

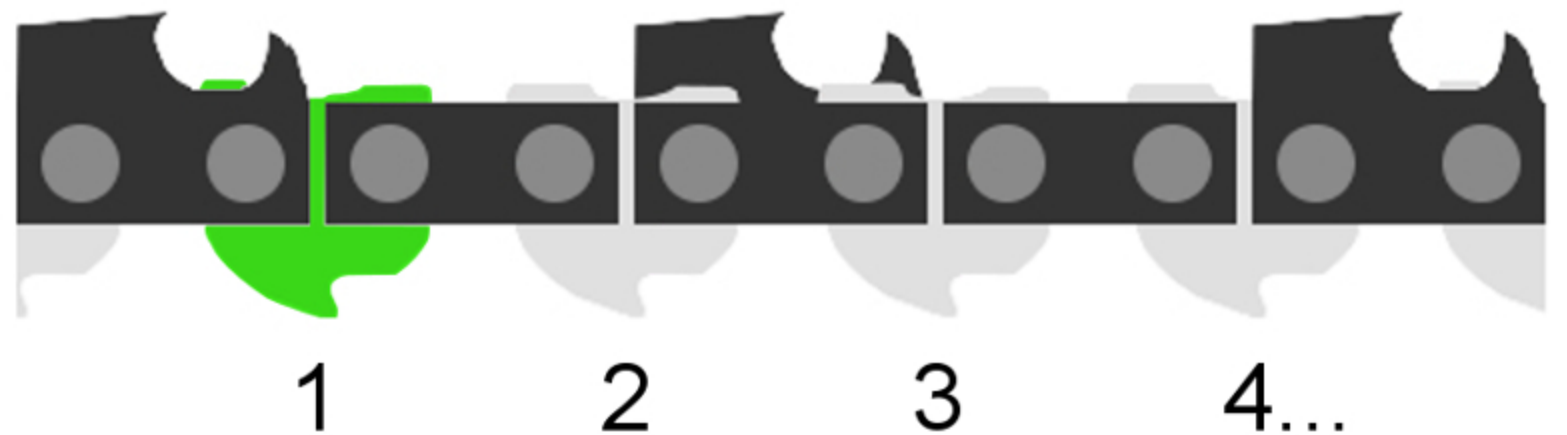

## Find the thickness of the drive links


Please measure the thickness of the drive links

1,1 mm thick

1,3 mm thick

1,5 mm thick

1,6 mm thick

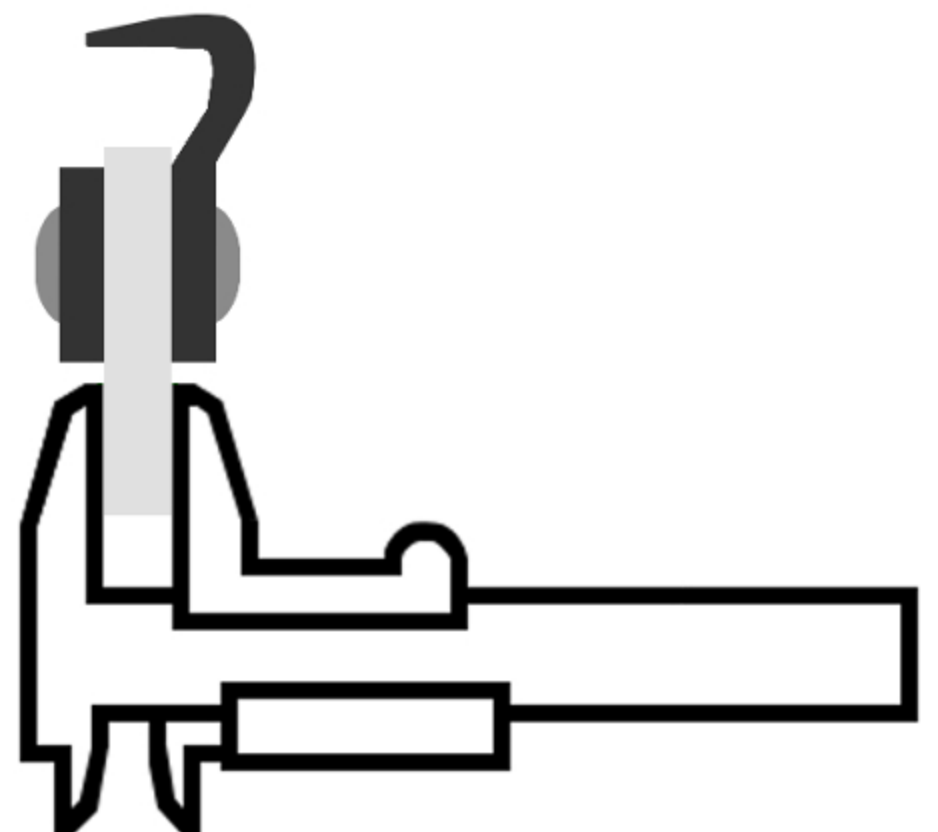

\* Caution! Please note that there are different tooth sizes for 1/4" 1,1mm, 3/8" 1,1mm and 3/8" 1,3mm chains. It is important to use exactly the same tooth size as before. If you have for example a low profile tooth size, you will find this chain in the [configurator](#) by choosing under thickness "LP"